


CONNECTION METHOD

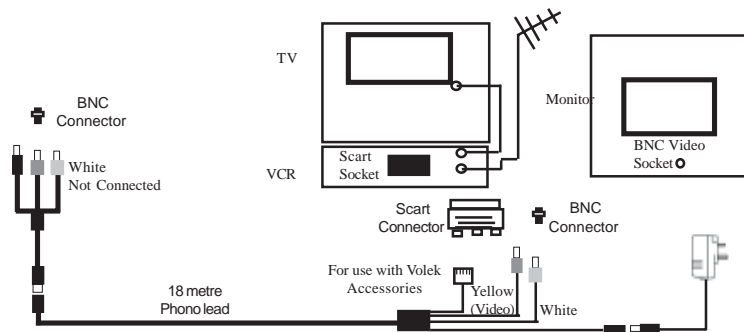

To view the camera picture;

1. Switch on the TV, VCR and power to the camera.
2. Select the VCR channel on your TV (the channel you normally use for watching video tapes).
3. Select the AV input on your VCR to view the camera picture. Note some models of VCR use channel 0 for the AV input. See the VCR instructions for further details.

Accessories For Your Camera

- CT200** 4 Way Camera Switcher
- CT210** Wide Band TV Modulator
- CT230** Time & Date Generator
- CT250** 15 Metre Extension Lead

WARRANTY

This product has a twelve month manufacturers parts and labour warranty. In the unlikely event that you encounter a problem with this product, please telephone the Voltek helpline on 09066 191 133*. Should the problem not be able to be resolved over the telephone it should be returned to the place of purchase or direct to Voltek.



Churchill Way, Lomeshaye Ind. Est., Nelson, Lancashire. BB9 6RT. England
 Tel: (01282) 695500 Fax: (01282) 695511 Helpline 09066 191 133*
 Email sales@voltek.co.uk Website www.voltek.co.uk

*Helpline call cost 60p/minute. Open 9am to 5pm, Mon to Fri.
 Voltek reserves the right to change any product or specification without notice
 (c) 2001 Voltek Automation Ltd. Issue 2

INSTALLATION


Thank you for purchasing the Universal Lead Kit. Please study these instructions carefully before attempting to use this kit.

The universal lead kit will connect a device with Phono, BNC or a voltek camera with a 4Pin mini DIN connector to any Monitor, Television, DVR or Video Recorder that has a Phono or BNC socket.

PRODUCT FEATURES

- Simple plug-&-go connections for a fast and simple installation.
- Easily connected into an aerial distribution system using the CT210 UHF modulator, allowing you to see the camera picture on any television throughout the property.

PACKAGE CONTENTS

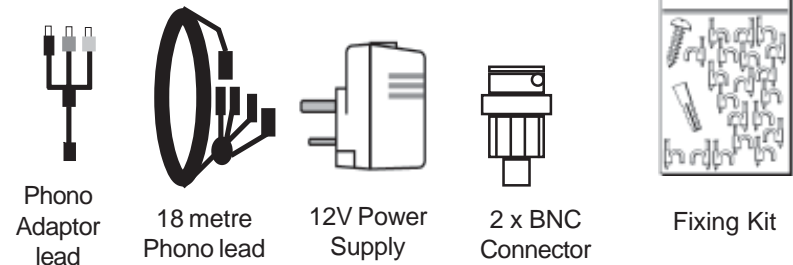

INSTALLING THE LEAD KIT

Before you install your camera and cables, we recommend that you temporarily connect the camera to your Monitor/TV (television) or VCR (video cassette recorder) to help determine the best position for the camera.

The camera will connect to a spare phono socket on your TV or VCR.

If you do not have any spare sockets, you will need to purchase either a AV Switcher; or a CT210 Channel Converter available from all good audio/video retailers. Please see the instructions supplied with the switcher / modulator for details on how to connect the camera.

INSTRUCTIONS